

SIEMENS

SIMATIC NET

Industrial Ethernet switches SCALANCE XB-200

Operating Instructions

Introduction

Safety notices

1

Description of the device

2

Installation

3

Connecting up

4

Upkeep and maintenance

5

Technical specifications

6

Dimension drawings

7




Approvals

A

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 DANGER
indicates that death or severe personal injury will result if proper precautions are not taken.
 WARNING
indicates that death or severe personal injury may result if proper precautions are not taken.
 CAUTION
indicates that minor personal injury can result if proper precautions are not taken.
NOTICE
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

 WARNING
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Introduction

Purpose of the Operating Instructions

These operating instructions support you when installing and connecting up devices of the SCALANCE XB-200 product group.

The configuration and the integration of the devices in a network are not described in these operating instructions.

Validity of the Operating Instructions

These operating instructions apply to the following devices:

- SCALANCE XB208
- SCALANCE XB205-3 (SC)
- SCALANCE XB205-3LD (SC)
- SCALANCE XB205-3
- SCALANCE XB216
- SCALANCE XB213-3 (SC)
- SCALANCE XB213-3LD (SC)
- SCALANCE XB213-3

Unless mentioned otherwise, the descriptions in these operating instructions refer to all devices of the SCALANCE XB-200 product group named above in the section on validity.

There are two variants of each device, refer to the section "Product overview (Page 11)".

Designations used

Classification	Description	Terms used
Product line	The product line includes all devices and variants of all product groups. If information applies to all product groups within the product line, the term SCALANCE X-200 is used.	SCALANCE X-200
Product group	If information applies to all devices and variants of a product group, the term SCALANCE XB-200 is used.	SCALANCE XB-200
Device	If information relates to a specific device, the device name is used.	e.g. SCALANCE XB205-3

Documentation on configuration

You will find detailed information on configuring the devices in the following configuration manuals:

- SCALANCE XB-200 Web Based Management
- SCALANCE XB-200 Command Line Interface

You will find the configuration manuals here:

- on the data medium that ships with some products:
 - Product CD / product DVD
 - SIMATIC NET Manual Collection
- On the Internet pages of Siemens Industry Online Support.

Further documentation

In the system manuals "Industrial Ethernet / PROFINET Industrial Ethernet" and "Industrial Ethernet / PROFINET passive network components", you will find information on other SIMATIC NET products that you can operate along with the devices of this product line in an Industrial Ethernet network.

There, you will find among other things optical performance data of the communications partner that you require for the installation.

You will find the system manuals here:

- On the data medium that ships with some products:
 - Product CD / product DVD
 - SIMATIC NET Manual Collection
- On the Internet pages of Siemens Industry Online Support under the following entry IDs:
 - 27069465 (<http://support.automation.siemens.com/WW/view/en/27069465>)
Industrial Ethernet / PROFINET Industrial Ethernet System Manual
 - 84922825 (<http://support.automation.siemens.com/WW/view/en/84922825>)
Industrial Ethernet / PROFINET - Passive network components System Manual

SIMATIC NET manuals

You will find the SIMATIC NET manuals here:

- On the data medium that ships with some products:
 - Product CD / product DVD
 - SIMATIC NET Manual Collection
- On the Internet pages of Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/15247>).

SIMATIC NET glossary

Explanations of many of the specialist terms used in this documentation can be found in the SIMATIC NET glossary.

You will find the SIMATIC NET glossary here:

- SIMATIC NET Manual Collection or product DVD
The DVD ships with certain SIMATIC NET products.
- On the Internet under the following address:
50305045 (<http://support.automation.siemens.com/WW/view/en/50305045>)


Catalogs

You will find the order numbers for the Siemens products of relevance here in the following catalogs:

- SIMATIC NET Industrial Communication / Industrial Identification, catalog IK PI
- SIMATIC Products for Totally Integrated Automation and Micro Automation, catalog ST 70
- Industry Mall - catalog and ordering system for automation and drive technology, Online catalog
(<https://eb.automation.siemens.com/goos/WelcomePage.aspx?regionUrl=/en&language=en>)

You can request the catalogs and additional information from your Siemens representative.

Unpacking and checking

 WARNING
Do not use any parts that show evidence of damage
If you use damaged parts, there is no guarantee that the device will function according to the specification.
If you use damaged parts, this can lead to the following problems:
<ul style="list-style-type: none">• Injury to persons• Loss of the approvals• Violation of the EMC regulations• Damage to the device and other components
Use only undamaged parts.

1. Make sure that the package is complete.
2. Check all the parts for transport damage.

Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, solutions, machines, equipment and/or networks. They are important components in a holistic industrial security concept. With this in mind, Siemens' products and solutions undergo continuous development. Siemens recommends strongly that you regularly check for product updates.

For the secure operation of Siemens products and solutions, it is necessary to take suitable preventive action (e.g. cell protection concept) and integrate each component into a holistic, state-of-the-art industrial security concept. Third-party products that may be in use should also be considered. For more information about industrial security, visit <http://www.siemens.com/industrialsecurity>.

To stay informed about product updates as they occur, sign up for a product-specific newsletter. For more information, visit <http://support.automation.siemens.com>.

Trademarks

The following and possibly other names not identified by the registered trademark sign ® are registered trademarks of Siemens AG:

SIMATIC NET, SCALANCE, C-PLUG, OLM

Table of contents

	Introduction	3
1	Safety notices	9
2	Description of the device	11
2.1	Product overview	11
2.2	Device views	13
2.2.1	Device view of a SCALANCE XB208	13
2.2.2	Device view of a SCALANCE XB205-3	14
2.2.3	Device view of a SCALANCE XB213-3	15
2.3	RESET button	16
2.4	LED display	18
3	Installation	19
3.1	Safety notices for installation	19
3.2	Mounting on DIN rails	21
4	Connecting up	23
4.1	Safety when connecting up	23
4.2	Power supply	25
4.3	Serial interface	27
4.4	Functional ground	28
5	Upkeep and maintenance	29
5.1	Downloading new firmware using TFTP without WBM and CLI	29
5.2	Restoring the factory settings	31
6	Technical specifications	33
6.1	Technical specifications of the SCALANCE XB208	33
6.2	Technical specifications of the SCALANCE XB205-3 (SC)	35
6.3	Technical specifications of the SCALANCE XB205-3LD (SC)	37
6.4	Technical specifications of the SCALANCE XB205-3	39
6.5	Technical specifications of the SCALANCE XB216	41
6.6	Technical specifications of the SCALANCE XB213-3 (SC)	42
6.7	Technical specifications of the SCALANCE XB213-3LD (SC)	44
6.8	Technical specifications of the SCALANCE XB213-3	46
6.9	Cable lengths	48
6.10	Switching properties	49

7	Dimension drawings.....	51
A	Approvals	55
	Index	61


Safety notices

Read the safety notices

Note the following safety notices. These relate to the entire working life of the device.
You should also read the safety notices relating to handling in the individual sections, particularly in the sections "Installation" and "Connecting up".

Safety notices on use in hazardous areas

General safety notices relating to protection against explosion

 WARNING
EXPLOSION HAZARD
DO NOT OPEN WHEN ENERGIZED.

Safety notices when using the device according to Hazardous Locations (HazLoc)

If you use the device under HazLoc conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.

This equipment is suitable for use in Class I, Zone 2, Group IIC or non-hazardous locations only.

Description of the device

2.1 Product overview

Article numbers

There are two variants of each device with different article numbers. The two variants differ only in their factory settings. All other properties are identical.

Device	Description	Article number (Ethernet/IP)	Article number (PROFINET)
SCALANCE XB208	8 x 10/100 Mbps RJ-45 ports	6GK5 208-0BA00-2TB2	6GK5 208-0BA00-2AB2
SCALANCE XB205-3 (SC)	5 x 10/100 Mbps RJ-45 ports, 3 x 10/100 Mbps SC ports, multimode fiber-optic cable	6GK5 205-3BD00-2TB2	6GK5 205-3BD00-2AB2
SCALANCE XB205-3LD (SC)	5 x 10/100 Mbps RJ-45 ports, 3 x 10/100 Mbps SC ports, single mode fiber-optic cable	6GK5 205-3BF00-2TB2	6GK5 205-3BF00-2AB2
SCALANCE XB205-3	5 x 10/100 Mbps RJ-45 ports, 3 x 10/100 Mbps ST ports, multimode fiber-optic cable	6GK5 205-3BB00-2TB2	6GK5 205-3BB00-2AB2
SCALANCE XB216	16 x 10/100 Mbps RJ-45 ports	6GK5 216-0BA00-2TB2	6GK5 216-0BA00-2AB2
SCALANCE XB213-3 (SC)	13 x 10/100 Mbps RJ-45 ports, 3 x 10/100 Mbps SC ports, multimode fiber-optic cable	6GK5 213-3BD00-2TB2	6GK5 213-3BD00-2AB2
SCALANCE XB213-3LD (SC)	13 x 10/100 Mbps RJ-45 ports, 3 x 10/100 Mbps SC ports, single mode fiber-optic cable	6GK5 213-3BF00-2TB2	6GK5 213-3BF00-2AB2
SCALANCE XB213-3	13 x 10/100 Mbps RJ-45 ports, 3 x 10/100 Mbps ST ports, multimode fiber-optic cable	6GK5 213-3BB00-2TB2	6GK5 213-3BB00-2AB2

Factory settings

EtherNet/IP variants


- Industrial Ethernet protocol: EtherNet/IP
- Base bridge mode: 802.1Q VLAN Bridge
- Redundancy mechanism: RSTP
- Trust mode: Trust DSCP

PROFINET variants

- Industrial Ethernet protocol: PROFINET
- Base bridge mode: 802.1D transparent bridge
- Redundancy mechanism: Ring redundancy
- Trust mode: Trust COS

Type designation

The type designation of a SCALANCE XB-200 is made up of several parts that have the following meaning:

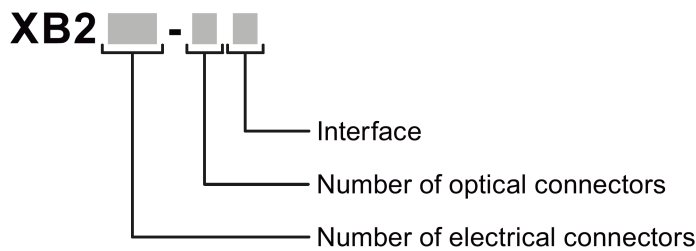

Interfaces of devices with optical connectors:

Interface	Property
(SC)	10/100 Mbps SC port, multimode fiber-optic cable, up to 5 km
LD (SC)	10/100 Mbps SC port, single mode fiber-optic cable, up to 26 km
[-]	10/100 Mbps ST port, multimode fiber-optic cable, up to 5 km

Components of the product

The following components are supplied with a SCALANCE XB-200:

- One device
- Two 3-terminal blocks for the power supply
- One product DVD with documentation and software

Accessories

The following accessories are available for SCALANCE XB-200:


Cable

Component	Description	Article number
Connecting cable (RJ-11/RS-232)	Preassembled, serial cable with RJ-11 and RS-232 plug, Length: 3 m pack of 1	6GK5 980-3BB00-0AA5

2.2 Device views

2.2.1 Device view of a SCALANCE XB208


The following figure shows an overview of the components of the SCALANCE XB208.

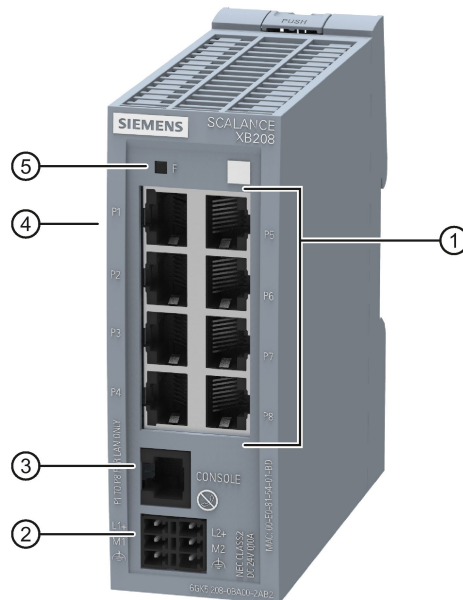

- ① Electrical ports with port LEDs
- ② Power supply with connector for grounding
- ③ Serial interface
- ④ "RESET" button (rear)
- ⑤ Fault LED

2.2.2 Device view of a SCALANCE XB205-3

The following figure shows an overview of the components of the SCALANCE XB205-3.

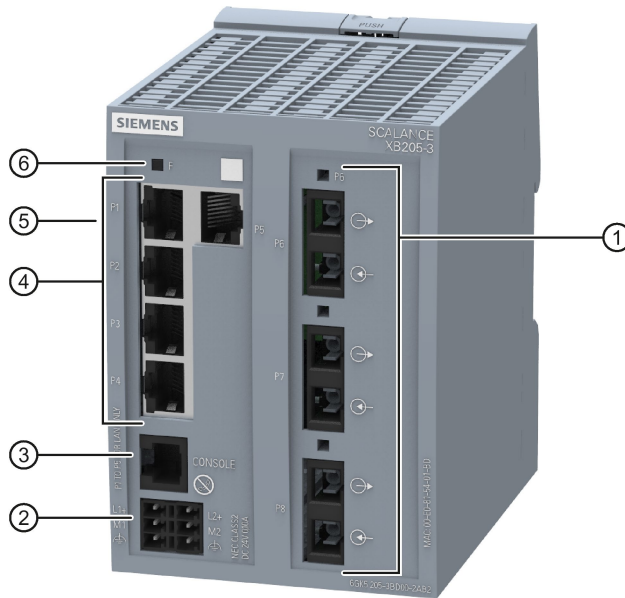

- ① Optical ports with port LEDs
- ② Power supply with connector for grounding
- ③ Serial interface
- ④ Electrical ports with port LEDs
- ⑤ "RESET" button (rear)
- ⑥ Fault LED

2.2.3 Device view of a SCALANCE XB213-3

The following figure shows an overview of the components of the SCALANCE XB213-3.



- ① Optical ports with port LEDs
- ② Power supply with connector for grounding
- ③ Serial interface
- ④ Electrical ports with port LEDs
- ⑤ "RESET" button (rear)
- ⑥ Fault LED

2.3 RESET button

Position

The "RESET" button is located on the rear of the SCALANCE XB-200.

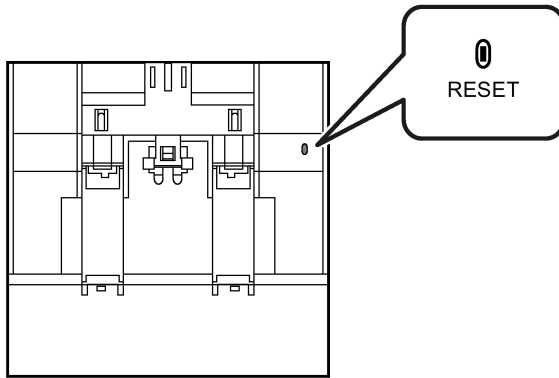


Figure 2-1 Position of the "RESET" button, for example on the SCALANCE XB213-3

Resetting the device to factory defaults

Note

Damage to the button

The RESET button is a short-stroke button with only a slight pressure point. To operate the button, you only need a force 2.5 N (approx. 250 g).

To avoid damaging the button press it with little force. Hold the tool you are using, for example, with only two fingers.

Note

If you reset, all the changes you have made will be overwritten by factory defaults.

To reset the device to the factory defaults, follow the steps below:

1. Press the "RESET" button with only slight force.

A screwdriver for example with following size is suitable:

- Blade thickness 0.8 - 1.8 mm
- Blade width 4.0 - 4.8 mm

2. Hold down the button for approximately 12 seconds.

After 9 seconds, the fault LED "F" flashes for 3 seconds.

- If you release the button after approximately 12 seconds, the device is restarted and the factory settings are restored.
- If you release the button before the 12 seconds have elapsed, the reset is canceled.

Enabling and disabling the button

Using the WBM and CLI, you can enable or disable the button function.

You will find detailed information about configuration of the button in the Configuration manuals (Page 3):

- SCALANCE XB-200 Web Based Management, section "Button"
- SCALANCE XB-200 Command Line Interface, section "Panel-Button"

2.4 LED display

Fault LED "F"

The fault LED "F" indicates the incorrect functioning of the device.

LED color	LED status	Meaning
-	Off	The device is a turned off.
Green	Lit	The device has not detected a problem.
Red	Lit	The device has detected a problem. The connected power supply is too low. Using the WBM and CLI, you can set when the device signals an error and which errors should be signaled.

Port LEDs "P"

The port LEDs indicate the status of the ports.

RJ-45 ports

Each RJ-45 port has 2 integrated LEDs.

The upper green LED shows the status of the link.

LED color	LED status	Meaning
Green	Lit	link exists
-	Off	No link exists

The lower yellow LED shows the status of data reception.

LED color	LED status	Meaning
Yellow	Flashing	Receiving data at port
-	Off	Not receiving data at port

SC/ST ports

There is an LED for each SC/ST port.


LED color	LED status	Meaning
Green	Lit	Link exists, data reception at port
-	Off	No link exists

Installation

3.1 Safety notices for installation


Safety notices


When installing the device, keep to the safety notices listed below.


 WARNING
If a device is operated in an ambient temperature of more than 50 °C, the temperature of the device housing may be higher than 70 °C. The device must therefore be installed so that it is only accessible to service personnel or users that are aware of the reason for restricted access and the required safety measures at an ambient temperature higher than 50 °C.

Safety notices on use in hazardous areas

General safety notices relating to protection against explosion

 WARNING
EXPLOSION HAZARD
SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2 OR ZONE 2.


 WARNING
The device may only be operated in an environment with pollution degree 1 or 2 (see IEC 60664-1).


 WARNING
When used in hazardous environments corresponding to Class I, Division 2 or Class I, Zone 2, the device must be installed in a cabinet or a suitable enclosure.

3.1 Safety notices for installation


Safety notices for use according to ATEX and IECEx

If you use the device under ATEX or IECEx conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

 WARNING
To comply with EC Directive 94/9 (ATEX95) or the conditions of IECEx, this enclosure or cabinet must meet the requirements of at least IP54 in compliance with EN 60529.

 WARNING
If the cable or conduit entry point exceeds 70 °C or the branching point of conductors exceeds 80 °C, special precautions must be taken. If the equipment is operated in an air ambient in excess of 60 °C, only use cables with admitted maximum operating temperature of at least 80 °C.

Further notes

 CAUTION
Use only approved components If you use components and accessories that are not approved for SIMATIC NET devices or their target systems, this may violate the requirements and regulations for safety and electromagnetic compatibility. Only use components approved for the SIMATIC NET devices.

NOTICE
Warming and premature aging of the IE switch due to direct sunlight Direct sunlight can heat up the device and can lead to premature aging of the IE switch and its cabling. Provide suitable shade to protect the IE switch against direct sunlight.

Note

During installation and operation, keep to the installation guidelines and safety notices described in this document and in the system manuals "Industrial Ethernet / PROFINET Industrial Ethernet" and "Industrial Ethernet / PROFINET passive network components".

You will find information on the system manuals in the section "Introduction (Page 3)", in "Further documentation".

3.2 Mounting on DIN rails

Installation

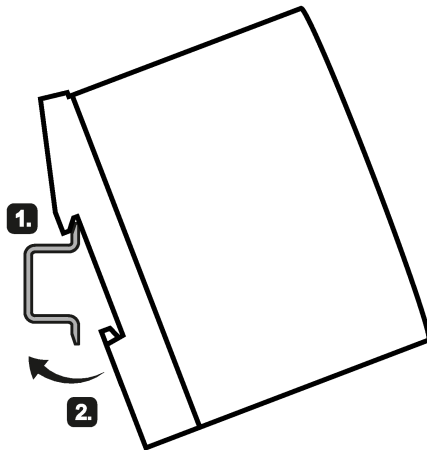


Figure 3-1 DIN rail mounting

To install the device on a 35 mm DIN rail complying with DIN EN 60715, follow the steps below:

1. Place the housing guide of the device on the top edge of the DIN rail ①.
2. Press the device down against the DIN rail until the spring catch locks in place ②.
3. Fit the connectors for the power supply, see the section "Power supply (Page 25)".
4. Insert the terminal blocks into the sockets on the device.

Removal

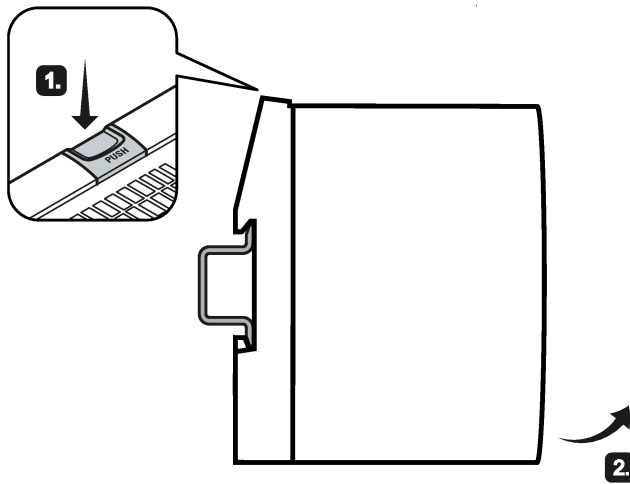


Figure 3-2 Removing from a DIN rail

To remove the device from a DIN rail, follow the steps below:


1. Disconnect all connected cables.
2. Release the DIN rail locking mechanism by pressing down on the release button ①.
3. Pull the lower part of the device away from the DIN rail ②.

Connecting up

4.1 Safety when connecting up

Safety notices


When connecting up the device, keep to the safety notices listed below.

 WARNING
<p>The equipment is designed for operation with Safety Extra-Low Voltage (SELV) by a Limited Power Source (LPS).</p> <p>This means that only SELV / LPS complying with IEC 60950-1 / EN 60950-1 / VDE 0805-1 must be connected to the power supply terminals. The power supply unit for the equipment power supply must comply with NEC Class 2, as described by the National Electrical Code (r) (ANSI / NFPA 70).</p> <p>If the equipment is connected to a redundant power supply (two separate power supplies), both must meet these requirements.</p>

NOTICE
<p>Failure of the data traffic due to contamination of optical plug-in connections</p> <p>Optical sockets and plugs are sensitive to contamination of the end face. Contamination can lead to the failure of the optical transmission network.</p> <p>Close unused optical sockets and plugs as well as pluggable transceivers and slots with the supplied protective caps.</p> <p>Remove the protective caps only immediately before you use the plug-in connection.</p>


Safety notices on use in hazardous areas

General safety notices relating to protection against explosion

 WARNING
<p>EXPLOSION HAZARD</p> <p>DO NOT CONNECT OR DISCONNECT EQUIPMENT WHEN A FLAMMABLE OR COMBUSTIBLE ATMOSPHERE IS PRESENT.</p>


Safety notices when using the device according to Hazardous Locations (HazLoc)


If you use the device under HazLoc conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

 WARNING
EXPLOSION HAZARD
DO NOT DISCONNECT WHILE CIRCUIT IS LIVE UNLESS AREA IS KNOWN TO BE NON-HAZARDOUS.

Safety notices for use according to ATEX and IECEx


If you use the device under ATEX or IECEx conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:


 WARNING
Take measures to prevent transient voltage surges of more than 40% of the rated voltage. This is the case if you only operate devices with SELV (safety extra-low voltage).

 WARNING
Safety notice for connecting with a LAN ID (Local Area Network)
A LAN or LAN segment with all the interconnected devices should be contained completely in a single low voltage power distribution in a building. The LAN is designed either for "Environment A" according to IEEE802.3 or "Environment 0" according to IEC TR 62102.
Do not connect any electrical connectors directly to the telephone network (telephone network voltage) or a WAN (Wide Area Network).

4.2 Power supply

Notes on the power supply

 WARNING
Incorrect power supply
Never operate the device with AC voltage or DC voltage higher than 32 V DC.

 CAUTION
Damage to the device due to overvoltage
The connector of the external power supply is not protected against strong electromagnetic pulses that can, for example, result from lightning strikes or switching large loads.
One of the tests used to attest the immunity of devices of the SCALANCE CB-200 IE switches to electromagnetic interference is the "surge immunity test" according to EN61000-4-5. This test requires overvoltage protection for the power supply lines. A suitable device is, for example, the Dehn Blitzductor BVT AVD 24, article number 918 422 or a comparable protective element.
Manufacturer: DEHN+SOEHNE GmbH+Co.KG, Hans-Dehn-Str.1, Postfach 1640, D92306 Neumarkt, Germany
Operate the SCALANCE XB-200 with suitable overvoltage protection.

Information on the power supply

- The power supply is connected using a 3-pin plug-in terminal block (spring-loaded terminal). The terminal block ships with the device and can also be ordered as a spare part.
- The power supply can be connected redundantly. Both inputs are isolated. There is no distribution of load.
- The power supply is connected over a high resistance with the enclosure to allow an ungrounded set up. The two power inputs are non-floating.
- To wire up the power connector, use a copper cable of category 24-16 AWG or a cable with a cross-section of 0.25 to 1.5 mm².
- To wire up the functional ground, use a copper cable of category 20-16 AWG or a cable with a cross-section of 0.75 to 1.5 mm².

Position and assignment

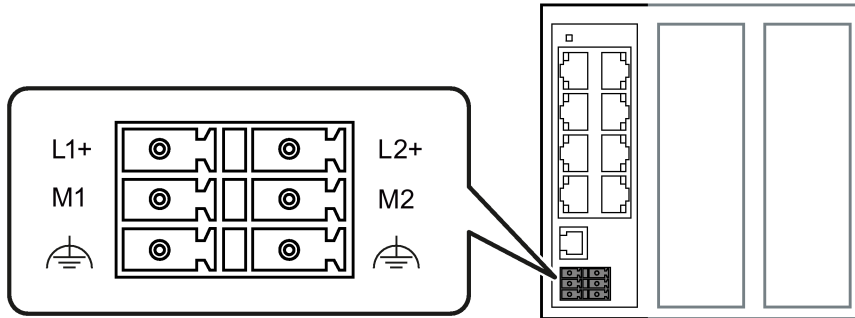




Figure 4-1 Position of the power supply, for example on the SCALANCE XB213-3

Contact	Assignment	Assignment	Contact
L1+	24 VDC	24 VDC	L2+
M1	Ground	Ground	M2
	Functional ground	Functional ground	

4.3 Serial interface

Information on the serial interface

- Via the serial interface (RJ-11 jack), you can access the CLI of the device directly via an RS-232 connection (115200 8N1) without assigning an IP address.
- Access to the device is also possible independent of the Ethernet ports.
- To connect the serial interface to the PC, you require a cable with an RJ-11 plug and 9-pin D-sub female connector. You can order the connecting cable for the serial interface as an accessory.

Position and assignment

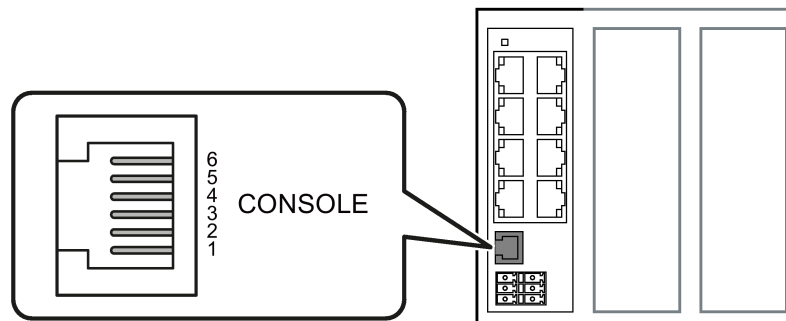


Figure 4-2 Position and pin assignment of the serial interface (RJ-11 jack), for example on the SCALANCE XB213-3

Assignment of the terminal block

The connecting cable listed in the "Accessories" section has the following pin assignment:

Contact	Pin assignment of the RJ-11 plug	Pin assignment of the D-sub female connector
1	-	-
2	-	TD (Transmit Data)
3	TD (Transmit Data)	RD (Receive Data)
4	SG (Signal Ground)	-
5	RD (Receive Data)	SG (Signal Ground)
6	-	-
7		-
8		-
9		-

Note

Pin assignment of the RJ-11 jack on the device

The RJ-11 jack on the device has a pinout to match the RJ-11 plug of the connecting cable mentioned above.

4.4 Functional ground

EMC disturbances are diverted to ground via the functional ground. This ensures the immunity of the data transmission.

The functional ground must be implemented with low impedance. The connection of the functional ground must be established directly on the mounting plate or the DIN rail terminal.

The IE switch has a terminal for functional ground, refer to the section "Power supply (Page 25)". Keep to the specified cross-sectional area for the functional ground.

The terminal is identified by the following symbol for the functional ground .

Follow the steps below to connect the functional ground:

1. Connect the terminal of the IE switch with as short a cable as possible ≤ 150 mm and with the required cross-sectional area to a grounded part of the system (DIN rail).
2. Connect the DIN rail with the ground of the system.

Protective/functional ground

The connection of the reference potential surface with the protective ground system is normally in the cabinet close to the power feed-in. This ground conducts fault currents to ground safely and according DIN/VDE 0100 is a protective ground to protect people, animals and property from too high contact voltages.

Apart from the protective ground, there is functional grounding in the cabinet. According to EN60204-1 (DIN/VDE 0113 T1) electrical circuits must be grounded. The chassis (0 V) is grounded at one defined point. Here, once again the grounding is implemented with the lowest leakage resistance to ground in the vicinity of the power feed-in.

With automation components, functional ground also ensures interference-free operation of a controller. Via the functional ground, interference currents coupled in via the connecting cables are discharged to ground.

Upkeep and maintenance

5.1 Downloading new firmware using TFTP without WBM and CLI

Firmware

The firmware is signed and encrypted. This ensures that only firmware created by Siemens can be downloaded to the device.

Pressing the "RESET" button

To load new firmware, you require the "RESET" button. When pressing the button, remember the information in the section "RESET button (Page 16)".

Procedure with Microsoft Windows

Using TFTP, you can supply a device with new firmware even when it cannot be reached using WBM or CLI. This section explains the procedure based on the example of Microsoft Windows.

Follow the steps below to load new firmware using TFTP:

1. Turn off the power to the device.
2. Press the "RESET" button applying only slight pressure button and reconnect the power to the device while holding down the button.
3. Hold down the button until the red fault LED "F" starts to flash.
4. Release the button as long as the red error LED is still flashing..

Note

This time only lasts a few seconds.

The bootloader of the device waits in this status for a new firmware file that you can download by TFTP.

5. Connect a PC to port 0.1 via an Ethernet cable.
6. Assign an IP address to the device using DHCP or the Primary Setup Tool.

5.1 Downloading new firmware using TFTP without WBM and CLI

7. Open a Windows command prompt and change to the directory where the file with the new firmware is located and then execute the following command :

```
tftp -i <IP address> put <firmware file>
```

Note

You can enable TFTP in Microsoft Windows as follows:

"Control Panel" > "Programs and Features" > "Turn Windows features on or off" > "TFTP Client".

8. Once the firmware has been transferred completely to the device and validated, there is an automatic restart on the device. This may take several minutes.

5.2 Restoring the factory settings

Note

When you reset the device parameters, all previously changed settings are lost.

With the "RESET" button

When pressing the button, remember the information in the section "RESET button (Page 16)".

Follow the steps below to reset the device parameters to the factory settings with the "RESET" button:

1. Turn off the power to the device.
2. Press the "RESET" button for example with a screwdriver and reconnect the power to the device while holding down the button.
3. Hold down the button until the red error LED "F" stops flashing after approximately 20 seconds and is permanently lit.
4. Release the button and wait until the fault LED "F" goes off.

The device starts automatically with the factory settings.

With the PST

Follow the steps below to reset the device parameters to the factory settings with the PST:

1. Select the device whose parameters you want to reset.
2. Click on the menu item "Reset" in the "Module" tab.
3. Confirm the prompt with "OK".

During configuration

You will find detailed information on resetting the device parameters using the WBM and CLI in the configuration manuals (Page 3):

- SCALANCE XB-200 Web Based Management, section "Restart"
- SCALANCE XB-200 Command Line Interface, section "Reset and Defaults"

Technical specifications

6.1 Technical specifications of the SCALANCE XB208

The following technical specifications apply to the SCALANCE XB208.

Technical specifications		
Attachment to Industrial Ethernet		
	Quantity	8
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply	Rated voltage	24 VDC
	Voltage range	19.2 to 28.8 VDC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 3 terminals
	Cable cross-section	<ul style="list-style-type: none"> • Minimum • 0.25 mm² (24 AWG) • Maximum • 1.5 mm² (16 AWG)
	Property	Implemented redundantly
Current consumption	at 24 VDC	170 mA
Effective power loss	at 24 VDC	4.1 W
Fusing		F 2.5 A / 125 V
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation at 25 °C	≤ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	40 x 117 x 109 mm	
Weight	250 g	
Installation options	Installation on a DIN rail	

Technical specifications

6.1 Technical specifications of the SCALANCE XB208

Technical specifications

Mean time between failure (MTBF)

MTBF (EN/IEC 61709; 40 °C) > 84 years

6.2 Technical specifications of the SCALANCE XB205-3 (SC)

The following technical specifications apply to the SCALANCE XB205-3 (SC).

Technical specifications			
Attachment to Industrial Ethernet			
Electrical connectors	Quantity	5	
	Connector	RJ-45 jack	
	Properties	Half/full duplex, MDI-X pinning	
	Transmission speed	10 / 100 Mbps	
Optical connectors	Quantity	3	
	Connector	SC socket	
	Properties	Full duplex acc. to 100Base-FX	
	Transmission speed	100 Mbps	
	Cable type	Multimode glass FO cable	
	Transmitter output (optical)		
	• Minimum	• -19 dBm	
	• Maximum	• -14 dBm	
	Receiver input		
	• Sensitivity min.	• -34 dBm	
• Input power max.	• -3 dBm		
Cable cross-section	Cable length	Attenuation	
• 50/125 µm	• 0 ... 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km	
• 62.5/125 µm	• 0 ... 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km	
Diagnostics interface			
Serial interface	Quantity	1	
	Connector	RJ-11 jack	
Electrical data			
Power supply	Rated voltage	24 VDC	
	Voltage range	19.2 to 28.8 VDC Safety Extra Low Voltage (SELV)	
	Design	Terminal block, 3 terminals	
	Cable cross-section		
• Minimum	• 0.25 mm ² (24 AWG)		
• Maximum	• 1.5 mm ² (16 AWG)		
Properties	Implemented redundantly		
Current consumption	at 24 VDC	300 mA *)	
Effective power loss	at 24 VDC	7.2 W	
Fusing	F 2.5 A / 125 V		

Technical specifications

6.2 Technical specifications of the SCALANCE XB205-3 (SC)

Technical specifications		
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation at 25 °C	≤ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	80 x 117 x 109 mm	
Weight	350 g	
Installation options	Installation on a DIN rail	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 55 years	

*)For every optical port that you set to "link down", the current consumption of the device is reduced by 30 mA.

6.3 Technical specifications of the SCALANCE XB205-3LD (SC)

The following technical specifications apply to the SCALANCE XB205-3LD (SC).

Technical specifications			
Attachment to Industrial Ethernet			
Electrical connectors	Quantity	5	
	Connector	RJ-45 jack	
	Properties	Half/full duplex, MDI-X pinning	
	Transmission speed	10 / 100 Mbps	
Optical connectors	Quantity	3	
	Connector	SC socket	
	Properties	Full duplex acc. to 100Base-FX	
	Transmission speed	100 Mbps	
	Cable type	Single mode glass FO cable	
	Transmitter output (optical)		
	• Minimum	• -15 dBm	
	• Maximum	• -8 dBm	
	Receiver input		
	• Sensitivity min.	• -32 dBm	
• Input power max.	• -3 dBm		
Cable cross-section	Cable length	Attenuation	
• 9/125 µm	• 0 to 26 km	• ≤ 0.5 dB/km at 1310 nm	
Diagnostics interface			
Serial interface	Quantity	1	
	Connector	RJ-11 jack	
Electrical data			
Power supply	Rated voltage	24 VDC	
	Voltage range	19.2 to 28.8 VDC Safety Extra Low Voltage (SELV)	
	Design	Terminal block, 3 terminals	
	Cable cross-section		
	• Minimum	• 0.25 mm ² (24 AWG)	
• Maximum	• 1.5 mm ² (16 AWG)		
	Properties	Implemented redundantly	
Current consumption	at 24 VDC	290 mA *)	
Effective power loss	at 24 VDC	7 W	
Fusing		F 2.5 A / 125 V	

Technical specifications

6.3 Technical specifications of the SCALANCE XB205-3LD (SC)

Technical specifications		
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation at 25 °C	≤ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	80 x 117 x 109 mm	
Weight	350 g	
Installation options	Installation on a DIN rail	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 50 years	

*)For every optical port that you set to "link down", the current consumption of the device is reduced by 30 mA.

6.4 Technical specifications of the SCALANCE XB205-3

The following technical specifications apply to the SCALANCE XB205-3.

Technical specifications			
Attachment to Industrial Ethernet			
Electrical connectors	Quantity	5	
	Connector	RJ-45 jack	
	Properties	Half/full duplex, MDI-X pinning	
	Transmission speed	10 / 100 Mbps	
Optical connectors	Quantity	3	
	Connector	ST(BFOC) socket	
	Properties	Full duplex acc. to 100Base-FX	
	Transmission speed	100 Mbps	
	Cable type	Multimode glass FO cable	
	Transmitter output (optical)		
	• Minimum	• -19 dBm	
	• Maximum	• -14 dBm	
	Receiver input		
	• Sensitivity min.	• -32 dBm	
• Input power max.	• -3 dBm		
Cable cross-section	Cable length	Attenuation	
• 50/125 µm	• 0 ... 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km	
• 62.5/125 µm	• 0 ... 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km	
Diagnostics interface			
Serial interface	Quantity	1	
	Connector	RJ-11 jack	
Electrical data			
Power supply	Rated voltage	24 VDC	
	Voltage range	19.2 to 28.8 VDC Safety Extra Low Voltage (SELV)	
	Design	Terminal block, 3 terminals	
	Cable cross-section		
• Minimum	• 0.25 mm ² (24 AWG)		
• Maximum	• 1.5 mm ² (16 AWG)		
Properties	Implemented redundantly		
Current consumption	at 24 VDC	300 mA *)	
Effective power loss	at 24 VDC	7.2 W	
Fusing	F 2.5 A / 125 V		

Technical specifications

6.4 Technical specifications of the SCALANCE XB205-3

Technical specifications		
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation at 25 °C	≤ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	80 x 117 x 109 mm	
Weight	350 g	
Installation options	Installation on a DIN rail	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 55 years	

*)For every optical port that you set to "link down", the current consumption of the device is reduced by 30 mA.

6.5 Technical specifications of the SCALANCE XB216

The following technical specifications apply to the SCALANCE XB216.

Technical specifications		
Attachment to Industrial Ethernet		
	Quantity	16
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply	Rated voltage	24 VDC
	Voltage range	19.2 to 28.8 VDC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 3 terminals
	Cable cross-section	<ul style="list-style-type: none"> • Minimum • 0.25 mm² (24 AWG) • Maximum • 1.5 mm² (16 AWG)
	Property	Implemented redundantly
Current consumption	at 24 VDC	280 mA
Effective power loss	at 24 VDC	6.7 W
Fusing		F 2.5 A / 125 V
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation at 25 °C	≤ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	80 x 117 x 109 mm	
Weight	400 g	
Installation options	Installation on a DIN rail	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 60 years	

6.6 Technical specifications of the SCALANCE XB213-3 (SC)

The following technical specifications apply to the SCALANCE XB213-3 (SC).

Technical specifications			
Attachment to Industrial Ethernet			
Electrical connectors	Quantity	13	
	Connector	RJ-45 jack	
	Properties	Half/full duplex, MDI-X pinning	
	Transmission speed	10 / 100 Mbps	
Optical connectors	Quantity	3	
	Connector	SC socket	
	Properties	Full duplex acc. to 100Base-FX	
	Transmission speed	100 Mbps	
	Cable type	Multimode glass FO cable	
	Transmitter output (optical)		
	• Minimum	• -19 dBm	
	• Maximum	• -14 dBm	
	Receiver input		
	• Sensitivity min.	• -34 dBm	
• Input power max.	• -3 dBm		
Cable cross-section	Cable length	Attenuation	
• 50/125 µm	• 0 ... 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km	
• 62.5/125 µm	• 0 ... 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km	
Diagnostics interface			
Serial interface	Quantity	1	
	Connector	RJ-11 jack	
Electrical data			
Power supply	Rated voltage	24 VDC	
	Voltage range	19.2 to 28.8 VDC Safety Extra Low Voltage (SELV)	
	Design	Terminal block, 3 terminals	
	Cable cross-section		
	• Minimum	• 0.25 mm ² (24 AWG)	
• Maximum	• 1.5 mm ² (16 AWG)		
	Properties	Implemented redundantly	
Current consumption	at 24 VDC	410 mA *)	
Effective power loss	at 24 VDC	9.8 W	
Fusing		F 2.5 A / 125 V	

6.6 Technical specifications of the SCALANCE XB213-3 (SC)

Technical specifications		
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation at 25 °C	≤ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	120 x 117 x 109 mm	
Weight	500 g	
Installation options	Installation on a DIN rail	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 45 years	

*)For every optical port that you set to "link down", the current consumption of the device is reduced by 30 mA.

6.7 Technical specifications of the SCALANCE XB213-3LD (SC)

The following technical specifications apply to the SCALANCE XB213-3LD (SC).

Technical specifications			
Attachment to Industrial Ethernet			
Electrical connectors	Quantity	13	
	Connector	RJ-45 jack	
	Properties	Half/full duplex, MDI-X pinning	
	Transmission speed	10 / 100 Mbps	
Optical connectors	Quantity	3	
	Connector	SC socket	
	Properties	Full duplex acc. to 100Base-FX	
	Transmission speed	100 Mbps	
	Cable type	Single mode glass FO cable	
	Transmitter output (optical)		
	• Minimum	• -15 dBm	
	• Maximum	• -8 dBm	
	Receiver input		
	• Sensitivity min.	• -32 dBm	
• Input power max.	• -3 dBm		
Cable cross-section	Cable length	Attenuation	
• 9/125 µm	• 0 to 26 km	• ≤ 0.5 dB/km at 1310 nm	
Diagnostics interface			
Serial interface	Quantity	1	
	Connector	RJ-11 jack	
Electrical data			
Power supply	Rated voltage	24 VDC	
	Voltage range	19.2 to 28.8 VDC Safety Extra Low Voltage (SELV)	
	Design	Terminal block, 3 terminals	
	Cable cross-section		
	• Minimum	• 0.25 mm ² (24 AWG)	
• Maximum	• 1.5 mm ² (16 AWG)		
	Properties	Implemented redundantly	
Current consumption	at 24 VDC	400 mA *)	
Effective power loss	at 24 VDC	9.6 W	
Fusing		F 2.5 A / 125 V	

6.7 Technical specifications of the SCALANCE XB213-3LD (SC)

Technical specifications		
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation at 25 °C	≤ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	120 x 117 x 109 mm	
Weight	500 g	
Installation options	Installation on a DIN rail	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 40 years	

*)For every optical port that you set to "link down", the current consumption of the device is reduced by 30 mA.

6.8 Technical specifications of the SCALANCE XB213-3

The following technical specifications apply to the SCALANCE XB213-3.

Technical specifications			
Attachment to Industrial Ethernet			
Electrical connectors	Quantity	13	
	Connector	RJ-45 jack	
	Properties	Half/full duplex, MDI-X pinning	
	Transmission speed	10 / 100 Mbps	
Optical connectors	Quantity	3	
	Connector	ST(BFOC) socket	
	Properties	Full duplex acc. to 100Base-FX	
	Transmission speed	100 Mbps	
	Cable type	Multimode glass FO cable	
	Transmitter output (optical)		
	• Minimum	• -19 dBm	
	• Maximum	• -14 dBm	
	Receiver input		
	• Sensitivity min.	• -32 dBm	
• Input power max.	• -3 dBm		
Cable cross-section	Cable length	Attenuation	
• 50/125 µm	• 0 ... 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km	
• 62.5/125 µm	• 0 ... 5 km	• ≤ 1 dB/km at 1310 nm; 1200 MHz * km	
Diagnostics interface			
Serial interface	Quantity	1	
	Connector	RJ-11 jack	
Electrical data			
Power supply	Rated voltage	24 VDC	
	Voltage range	19.2 to 28.8 VDC Safety Extra Low Voltage (SELV)	
	Design	Terminal block, 3 terminals	
	Cable cross-section		
	• Minimum	• 0.25 mm ² (24 AWG)	
• Maximum	• 1.5 mm ² (16 AWG)		
	Properties	Implemented redundantly	
Current consumption	at 24 VDC	410 mA *)	
Effective power loss	at 24 VDC	9.8 W	
Fusing		F 2.5 A / 125 V	

Technical specifications		
Permitted ambient conditions		
Ambient temperature	During operation up to 2000 m	0 °C to +60 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation at 25 °C	≤ 95 % no condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Polycarbonate (PC-GF10)	
Degree of protection	IP20	
Dimensions (W x H x D)	120 x 117 x 109 mm	
Weight	500 g	
Installation options	Installation on a DIN rail	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 45 years	

*)For every optical port that you set to "link down", the current consumption of the device is reduced by 30 mA.

6.9 Cable lengths

The following technical specifications apply to the following devices:

- SCALANCE XB208
- SCALANCE XB205-3 (SC)
- SCALANCE XB205-3LD (SC)
- SCALANCE XB205-3
- SCALANCE XB216
- SCALANCE XB213-3 (SC)
- SCALANCE XB213-3LD (SC)
- SCALANCE XB213-3

Cable	Permitted cable length
IE TP torsion cable with IE FC Outlet RJ-45 + 10 m TP cord	0 to 45 m + 10 m TP cord
IE TP torsion cable with IE FC RJ-45 Plug 180	0 to 55 m
IE FC TP Marine / Trailing / Flexible cable with IE FC Outlet RJ-45 + 10 m TP cord	0 to 75 m + 10 m TP cord
IE FC TP Marine / Trailing / Flexible cable with IE FC RJ-45 Plug 180	0 to 85 m
IE FC TP standard cable with IE FC Outlet RJ-45 + 10 m TP cord	0 to 90 m + 10 m TP cord
IE FC TP standard cable with IE FC RJ-45 Plug 180	0 to 100 m

6.10 Switching properties

The following technical specifications apply to the following devices:

- SCALANCE XB208
- SCALANCE XB205-3 (SC)
- SCALANCE XB205-3LD (SC)
- SCALANCE XB205-3
- SCALANCE XB216
- SCALANCE XB213-3 (SC)
- SCALANCE XB213-3LD (SC)
- SCALANCE XB213-3

Switching properties		
Aging time	Can be configured (default value: 40 seconds)	
Max. number of learnable addresses	8192	
Switching technique	Store and forward	
Latency	10 microseconds	
Full wire speed switching:		
	Number of frames per second (at 100 Mbps)	Frame length
	148810	64 bytes
	84459	128 bytes
	45290	256 bytes
	23496	512 bytes
	11973	1024 bytes
	9615	1280 bytes
	8127	1518 bytes

Note

The number of SCALANCE XB-200 modules connected in a line influences the frame delay. When a frame passes through the switch, this is delayed by the store-and-forward function of the SCALANCE XB-200 by 10-130 microseconds (at 100 Mbps).

Dimension drawings

Note

Dimensions are specified in mm.

Front view of the SCALANCE XB208

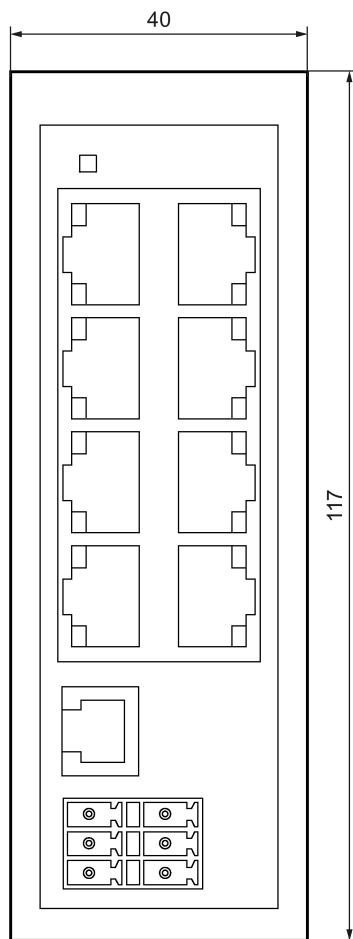


Figure 7-1 Width and height

Front view of the SCALANCE XB205-3 (SC), XB205-3LD (SC), XB205-3 and XB216

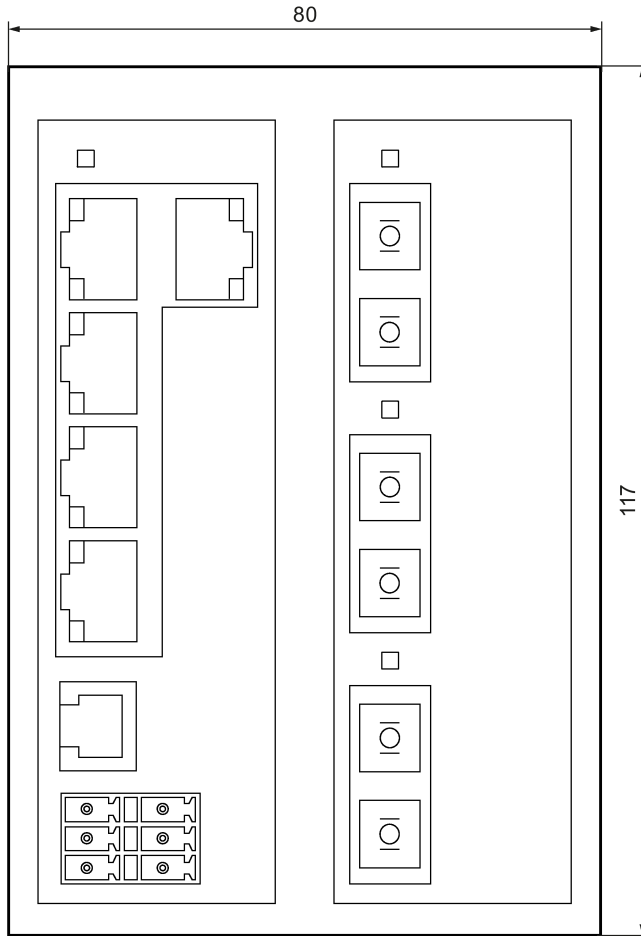


Figure 7-2 Width and height based on the example of the SCALANCE XB205-3

Front view of the SCALANCE XB213-3 (SC), XB213-3LD (SC) and XB213-3

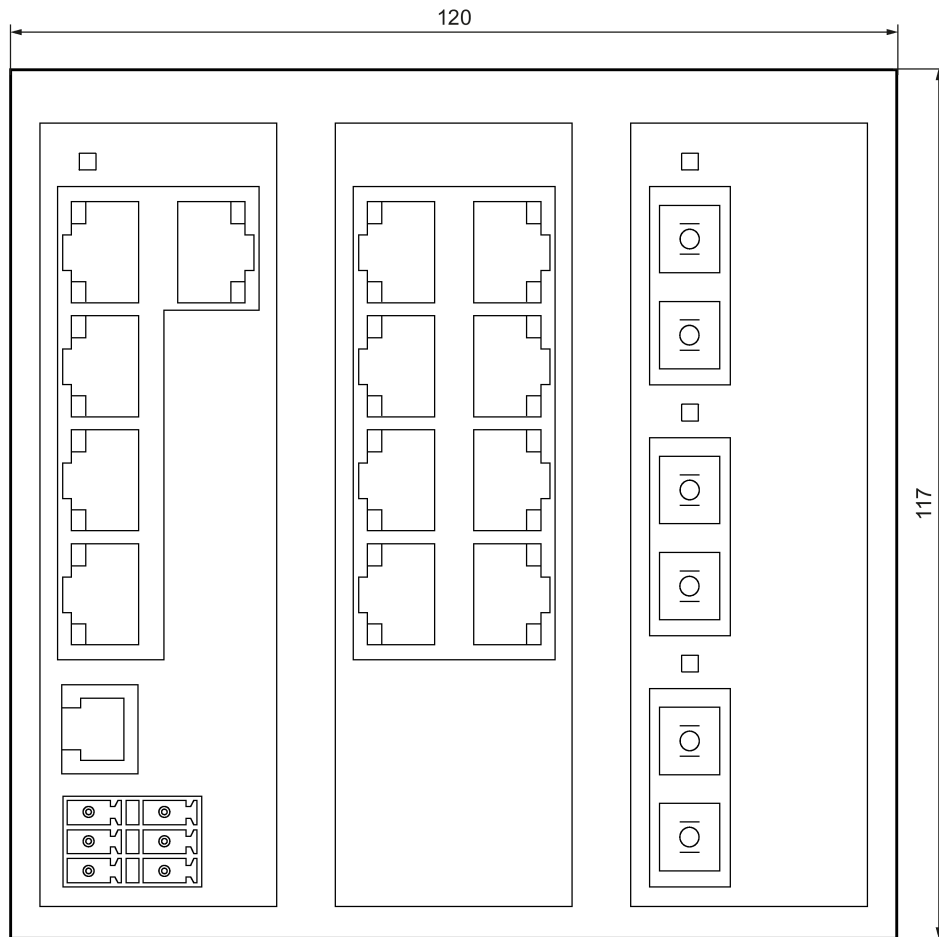


Figure 7-3 Width and height based on the example of the SCALANCE XB213-3

Side view of the SCALANCE XB-200

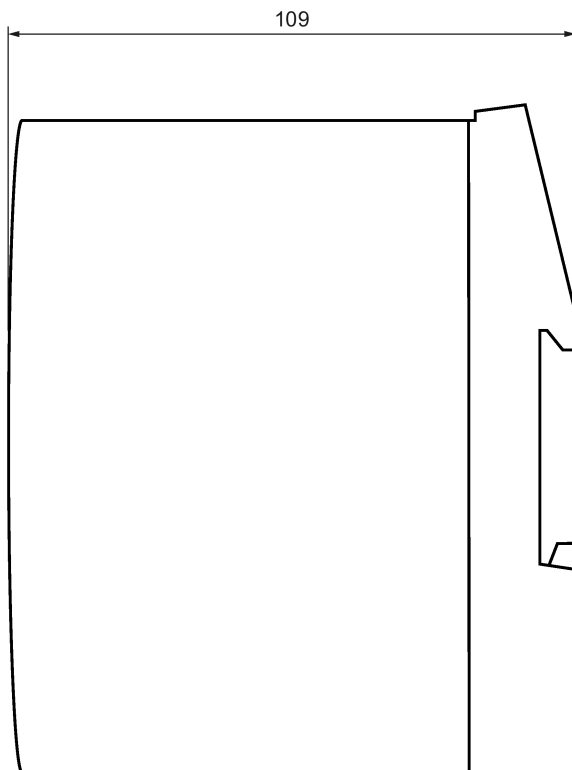


Figure 7-4 Depth

Approvals

The SIMATIC NET products described in these Operating Instructions have the approvals listed below.

Note

Issued approvals on the type plate of the device

The specified approvals apply only when the corresponding mark is printed on the product. You can check which of the following approvals have been granted for your product by the markings on the type plate.

Current approvals on the Internet

You will find the current approvals for the product on the Internet pages of Siemens Industry Online Support (<http://support.automation.siemens.com/WW/view/en/33118389/134200>).
→ Entry type "Certificates"

EC directives

SIMATIC NET products meet the requirements and aims of the following EC directives.

EMC directive (electromagnetic compatibility)

The SIMATIC NET products described in these operating instructions meet the requirements of EC directive 2004/108/EC "Electromagnetic Compatibility" for the following areas of application:

Field of application	Requirements	
	Emission	Immunity to interference
Industry	EN 61000-6-4 : 2007	EN 61000-6-2 : 2005

 **WARNING**

Personal injury and property damage can occur

The installation of expansions that are not approved for SIMATIC NET products or their target systems may violate the requirements and regulations for safety and electromagnetic compatibility.

Only use expansions that are approved for the system.

- **Keep to the installation guidelines**

The devices meet the requirements if you adhere to the installation and safety instructions contained in this documentation and in the following documentation when installing and operating the devices.

- **You can always find the latest documentation on the Internet**

The current descriptions of the currently available products can always be found on the Internet under the specified entry IDs/Internet pages:

- "Industrial Ethernet / PROFINET Industrial Ethernet" System Manual

- "Industrial Ethernet / PROFINET - Passive network components" System Manual

You will find information on the system manuals in the section "Introduction (Page 3)", in "Further documentation".

- "EMC Installation Guidelines" configuration manual

60612658 (<http://support.automation.siemens.com/WW/view/en/60612658>)

- **Working on the device**

To protect the device from electrostatic discharge, personnel must first discharge any electrostatic charge from their body before touching the device.

Note

The test was performed with a device and a connected communications partner that also meets the requirements of the standards listed above.

When operating the device with a communications partner that does not comply with these standards, adherence to the corresponding values cannot be guaranteed.

Safety of electrical equipment

In the version put into circulation by Siemens AG, the SIMATIC NET products described in these Operating Instructions conform to the regulations of the following European directive:


- EN 60950-1
Information technology equipment - Safety - Part 1: General requirements

EU declaration of conformity

You will find EC declaration of conformity for these products on the Internet pages of Siemens Industry Online Support

(<http://support.automation.siemens.com/WW/view/en/33118389/134200>).

ATEX (explosion protection directive)

 WARNING
<p>When using SIMATIC NET products in hazardous area zone 2, make absolutely sure that the associated conditions in the following document are adhered to:</p> <p>"SIMATIC NET Product Information Use of subassemblies/modules in a Zone 2 Hazardous Area".</p> <p>You will find this document</p> <ul style="list-style-type: none"> • on the data medium that ships with some devices. • on the Internet pages of Siemens Industry Online Support (http://support.automation.siemens.com/WW/view/en). <p>Enter the document identification number C234 as the search term.</p>

SIMATIC NET products meet the requirements of the EC directive:94/9/EC "Equipment and Protective Devices for Use in Potentially Explosive Atmospheres".

ATEX classification:

II 3 G Ex nA IIC T4 Gc

KEMA 07ATEX0145 X

The products meet the requirements of the following standards:

- EN 60079-15 (electrical apparatus for potentially explosive atmospheres; Type of protection "n")
- EN 60079-0 (Explosive atmospheres - Part 0: Equipment - General requirements)

You will find the current versions of the standards in the currently valid ATEX certificates.

IECEX

The SIMATIC NET products meet the requirements of explosion protection according to IECEX.

IECEX classification:

Ex nA IIC T4 Gc

DEK 14.0025X

The products meet the requirements of the following standards:

- IEC 60079-15 (Explosive atmospheres - Part 15: Equipment protection by type of protection "n")
- IEC 60079-0 (Explosive atmospheres - Part 0: Equipment - General requirements)

You will find the current versions of the standards in the currently valid IECEX certificates.

FM

The product meets the requirements of the standards:

- Factory Mutual Approval Standard Class Number 3611
- FM Hazardous (Classified) Location Electrical Equipment:
Non Incendive / Class I / Division 2 / Groups A,B,C,D / T4 and
Non Incendive / Class I / Zone 2 / Group IIC / T4

cULus Approval for Information Technology Equipment

cULus Listed I. T. E.

Underwriters Laboratories Inc. complying with

- UL 60950-1 (Information Technology Equipment)
- CSA C22.2 No. 60950-1-03

Report no. E115352

cULus Approval Hazardous Location

cULus Listed I. T. E. FOR HAZ. LOC.

Underwriters Laboratories Inc. complying with

- UL 60950-1 (Information Technology Equipment)
- ANSI/ISA 12.12.01-2007
- CSA C22.2 No. 213-M1987

Approved for use in

Cl. 1, Div. 2, GP A, B, C, D T4

Cl. 1, Zone 2, GP IIC T4

Report no. E240480

RCM

The product meets the requirements of the AS/NZS 2064 standard (Class A).

KC (Korean Standard)

The products meet the requirements of the "Korean Standard".

Marking for the customs union



EAC (Eurasian Conformity)

Customs union of Russia, Belarus and Kazakhstan

Declaration of the conformity according to the technical regulations of the customs union
(TR CU)


FDA and IEC marks

The following devices meet the FDA and IEC requirements listed below:

Device	CLASS 1 LASER Product	CLASS 1 LED Product
SCALANCE XB208	-	-
SCALANCE XB205-3 (SC)	-	•
SCALANCE XB205-3LD (SC)	•	-
SCALANCE XB205-3	-	•
SCALANCE XB216	-	-
SCALANCE XB213-3 (SC)	-	•
SCALANCE XB213-3LD (SC)	•	-
SCALANCE XB213-3	-	•



Figure A-1 FDA and IEC approvals

 CAUTION
<p>Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.</p>

Mechanical stability (in operation)

Device	IEC 60068-2-27 shock	IEC 60068-2-6 vibration
	15 g, 11 ms duration 6 shocks per axis	10 - 58 Hz: 0.075 mm 85 - 150 Hz: 1 g 1 octave/min, 20 sweeps
SCALANCE XB208	•	•
SCALANCE XB205-3	•	•
SCALANCE XB205-3 (LD)	•	•
SCALANCE XB205-3 (ST)	•	•
SCALANCE XB216	•	•
SCALANCE XB213-3	•	•
SCALANCE XB213-3 (LD)	•	•
SCALANCE XB213-3 (ST)	•	•

Index

A

Accessories, 12
Ambient temperature, 33, 36, 38, 40, 41, 43, 45, 47
Article numbers, 11
Attachment to Industrial
Ethernet, 33, 35, 37, 39, 41, 42, 44, 46

C

CLI, 27, 29
Command Line Interface, 27, 29
Components of the product, 12
Configuration manuals, 17, 31
Connecting up
 Grounding, 28

D

Dimensions, 33, 36, 38, 40, 41, 43, 45, 47

E

Electrical data, 33, 35, 37, 39, 41, 42, 44, 46
Environmental conditions, 33, 36, 38, 40, 41, 43, 45, 47

F

Factory defaults, 16
Fault LED, 13, 14, 15
Firmware, 29

G

Glossary, 5
Grounding, 13, 14, 15, 28

H

Housing, 33, 36, 38, 40, 41, 43, 45, 47

I

Installation, 33, 36, 38, 40, 41, 43, 45, 47
 Installation on a DIN rail, 21
Installation on a DIN rail, 21

L

LED displays, 18
 Fault LED, 18
 Port LEDs, 18

M

MTBF, 34, 36, 38, 40, 41, 43, 45, 47

P

Permitted ambient
conditions, 33, 36, 38, 40, 41, 43, 45, 47
Power supply, 13, 14, 15, 25

R

RESET button, 13, 14, 15, 16, 29
Reset device, 16

S

Safety notices
 for installation, 19
 general, 9
 Use in hazardous areas, 9, 19, 23
 when connecting up, 23
Serial interface, 13, 14, 15, 27
SIMATIC NET glossary, 5
SIMATIC NET manual, 4
Spring-loaded terminal, 25
System manual, 4, 20, 56

W

WBM, 29
Web Based Management, 29

Weight, 33, 36, 38, 40, 41, 43, 45, 47